PROCHEM Stainless Steel Specialists

Product solutions for a world of difference

INSTRUMENTATION CLASSIC FILTERS





PROCHEM INSTRUMENTATION

Classic Fil

Classic Filters manufacture bonded microfibre filter elements and associated filter housings. They are suitable for a variety of gas and liquid applications and are used in a wide range of industries around the world.

Our disposable microfibre filter elements are extremely efficient as well as being low cost. There are a number of benefits with this type of element and they offer high flow rates with very low pressure drops.

All products conform to industry standard sizes and grades, being completely interchangeable with other manufacturers' filter housings and elements. As well as the disposable type elements we also have a range of stainless steel and PTFE elements available.

The comprehensive product range enables a greater flexibility for customers because of the wider choice of standard designs. The development of new products is customer driven and our engineers work closely with OEM customers and end-users.

Special housings and filter elements designed and produced in-line with customer requirements and specifications are always available.

Prochem is the appointed Australian and Singaporean distributor and are here to find a solution to your filtration problem.



FILTRATION APPLICATIONS

Our filter housings and elements are suitable for a wide range of liquid and gas applications for particulate and coalescing.

Housings are available in a selection of materials to provide a solution for the most demanding applications. Materials including 316L Stainless Steel, Aluminium, PTFE, Nylon, Polypropylene, PVDF, as well as exotic materials such as Monel[®], Hastelloy[®], Titanium and Inconel[®].

Coalescing Filtration

Coalescing is the separation of liquid aerosols and droplets from a gas. Using a coalescing filter element installed in a housing with three ports the wet gas sample passes though element inside to outside.

The inner capture layer is a high efficiency coalescing layer and the outer a coarser drainage layer. Coalescing filter elements will also remove particulates at the same efficiency as particulate filter elements of the same grade.

Housings are available with a variety of drain port sizes and physical dimensions to maximise service life.

Particulate Filtration

Particulates are removed from gases and liquids using a two port in-line filter housing and particulate type filter element. The liquid or gas flows through the element from the outside to the inside to maximise the service life.

Using the same particulate filter elements in a housing with a single port, solids are removed from liquids and gases in end of line applications.

Filters



Fast Loop & Bypass

Bypass or Fast Loop installations are used to minimise the time delay in sample systems. A relatively high flow is used to get the sample close to the analyser and then the low flow sample is split using the filter housing with the rest of the flow being returned to the process.



Traditionally bypass applications used a three port T-shaped housing, however the Fast Loop style housings allow a continuous flushing of the filter element and greatly increases the service life and reduces the internal volume of the system.

PTFE Porous Membranes


PTFE membrane housings are designed to remove liquids from a gas. The porous PTFE membrane will only allow molecules of gas or vapour to pass through it and so all liquid is stopped.

They are suitable for sampling systems and applications to protect analysers and other instruments.




Monel, Hastelloy and Inconel are registered trademarks.



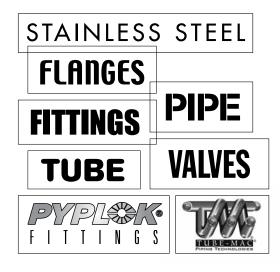



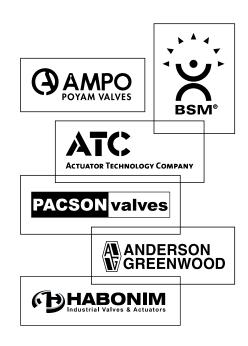



FOR FURTHER DETAILS PLEASE CONTACT YOUR LOCAL PROCHEM OFFICE

ADELAIDE

91 Orsmond Street Hindmarsh, South Australia Australia 5007 **Telephone 61-8-8241 7633** Facsimile 61-8-8241 7644 Email adesales@prochem.com.au

BRISBANE

63 Radley Street Virginia, Queensland Australia 4014 **Telephone 61-7-3265 2711** Facsimile 61-7-3265 7430 Email brisales@prochem.com.au

HOBART

96-98 Central Avenue

Derwent Park, Tasmania Australia 7009

Telephone 61-3-6272 8828

Facsimile 61-3-6272 8688

Email hobsales@prochem.com.au

MELBOURNE

5-15 Ventura Place Dandenong South, Victoria Australia 3175 **Telephone 61-3-9799 2244** Facsimile 61-3-9799 2255 Email melsales@prochem.com.au

PERTH

6 Forge Street Welshpool, Western Australia Australia 6106 **Telephone 61-8-9458 7777** Facsimile 61-8-9351 8170

Email persales@prochem.com.au

SYDNEY 27 Lisbon Street Villawood, New South Wales

Australia 2163 **Telephone 61-2-9727 0044** Facsimile 61-2-9728 6766 Email sydsales@prochem.com.au

SINGAPORE

69 Joo Koon Circle, Singapore 629084 **Telephone 65-6298 7887** Facsimile 65-6298 7667 Email sales@prochem.com.sg

THAILAND

5/8 Moo 4, Soi Ramintra 15, Ramintra Road, Anusaowaree, Bangkhen, Bangkok 10220 **Telephone 66-2-970-6574** Ext 404-8 Facsimile 66-2-970-5668

Email sales@prochemthai.co.th

www.prochem.com.au